


This sheet covers the installation of the Valerus Premier Application Servers 2U rack-mount form. This system should only be installed by a qualified technician using common hand tools and approved materials in accordance with the National Electrical Code ANSI/NFPA 70, state and local wiring codes.

## Front Panel Connections & Controls



## Rear Panel Connections & Controls

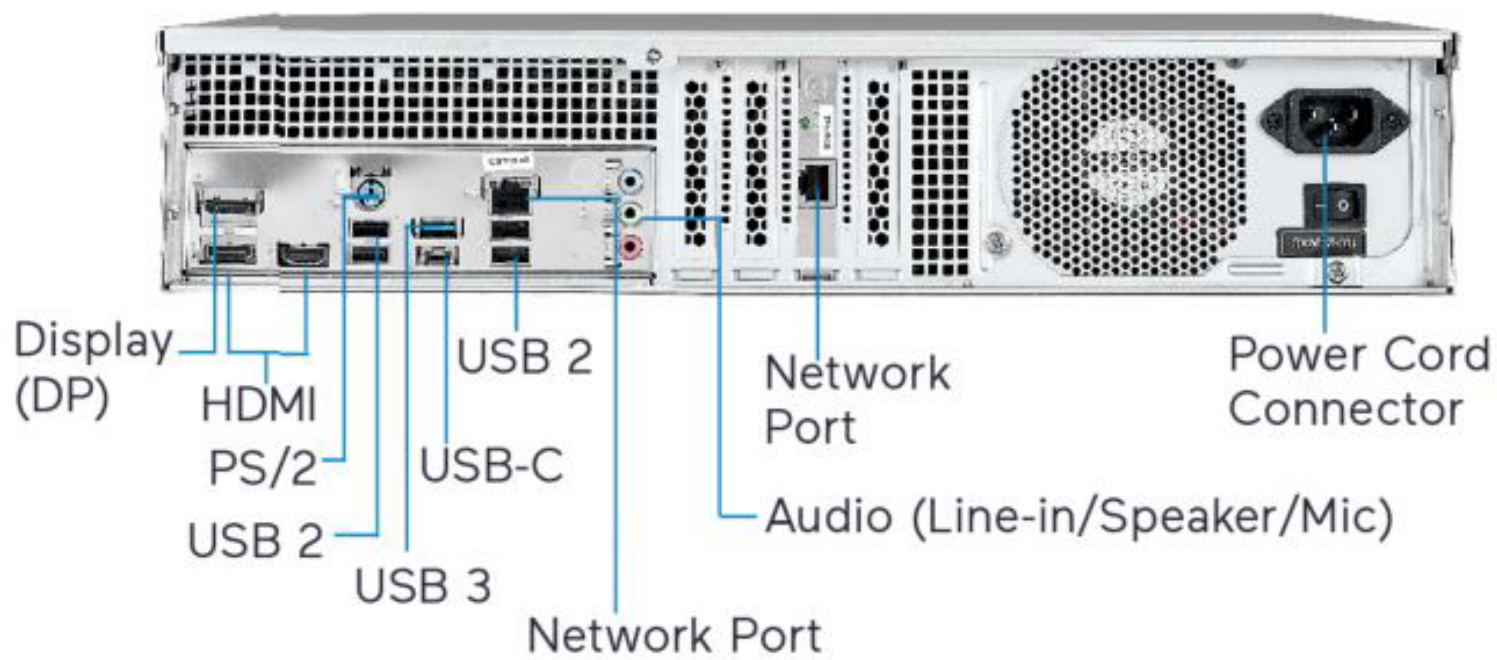



## Unpacking and Installation

Unpack the unit and place it in the mounting location. Hard drives are preinstalled from the factory.

- Keyboard and mouse are included with the unit.
- Connect monitor(s) using the DP and/or HDMI port (refer to figures above). DP to HDMI adapters are provided as needed.
- Connect device to the network using the WAN (Internet) port. Refer to figure above. The port is setup to procure an IP address automatically using DHCP.
- Attach the power cord and power the unit on. It is recommended to use an Uninterrupted Power Supply (UPS) to prevent data loss/corruption and/or drive failures due to sudden power loss.


## Configure System: Valerus Application Server

1. Log into Windows using default credentials (login: VII; password: 1234).
2. Upon login, double click on the Valerus icon to launch the application.  
Note: This icon launches Valerus in Internet Explorer®. To launch Valerus using the Microsoft® Edge® browser, refer to the section that follows.
3. Sign into the application using default credentials (login: admin; password: 1234).  
**Note:** For increased security, it is highly recommended to change the credentials upon first login both for Windows and Valerus application.
4. Click on the Configuration tab and then on NVRs.
5. There should be no NVRs attached to the system. Click on "Add Discovered NVRs."
6. All the available NVRs on the network will show up on this screen, including the unconnected network ports on the system. Select the IP address of the desired NVR and then click Apply and close.
7. With the NVR added successfully, and the Status OK (green check), the system is ready to add cameras.

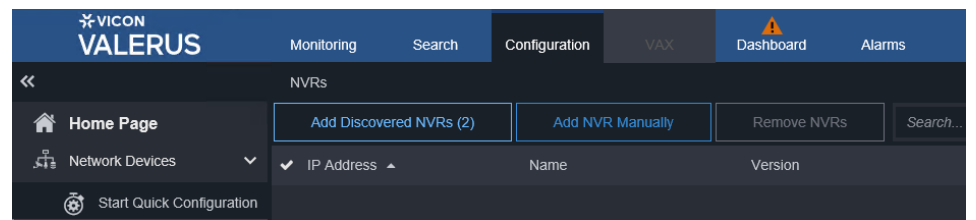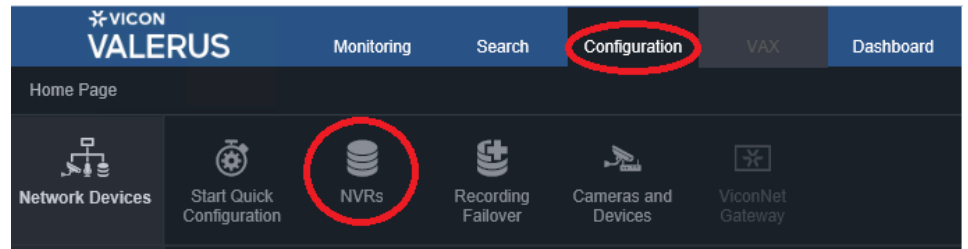

## Using Microsoft Edge Browser to Run Valerus

1. Log into Windows using default credentials (login: VII; password: 1234).  
**Note:** For increased security, it is highly recommended to change the credentials upon first login both for Windows and Valerus application.
2. A link to an Edge Installation Tool has been provided on the desktop. Click on the link to launch the tool.
3. The Valerus Edge Configurator screen will display. Add the IP address of the Valerus Application Server to be viewed and click the Add button. A message will display that a restart of the PC is required for changes to take effect. Click OK (just clicking OK will not restart the PC). More addresses can be added as needed. After all IP addresses have been added, restart the PC.
4. Click the create shortcut button (noted in red box) to place a shortcut icon on the desktop. Use this icon to launch Valerus in Edge. Valerus can also be accessed directly from the Edge browser by entering its IP address in the Edge browser; Valerus will launch.
5. Sign into the application using default credentials.

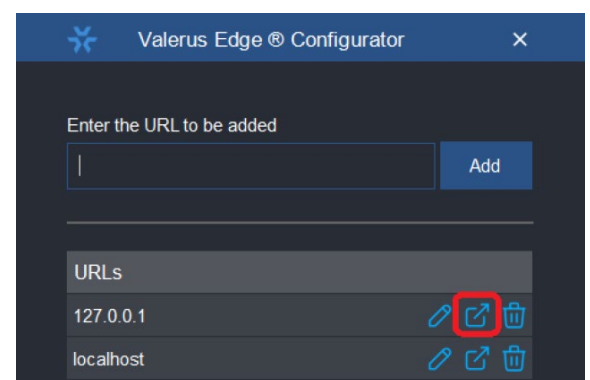

Valerus documentation has been provided on the system. A link is on the desktop. For the most updated documentation on Valerus NVRs, visit Vicon's website at:

[www.viconsecurity.com/products/valerus-vms/](http://www.viconsecurity.com/products/valerus-vms/).

### Valerus Manual



### Valerus Performance Guide

